SAFE BATTERY USAGE

13. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conductor may overheat and cause burns.
14. When inserting the batteries into this product, the proper polarity or direction must be observed. Reverse inserted of batteries can cause charging, which may result in leakage or explosion.
15. Remove the batteries from this product if the product are not be used for a long period of time (several months or more) since during this time the batteries could leak, damaging the product.
16. Do not store this product, or the batteries provided with or identified for use with this product in high temperature areas.

Batteries should be stabilized at room temperature prior to use after cold storage.

POWER SOURCE

This CD player can be operated on either 120V 60Hz AC house current with the AC adapter on 4.5V DC 500mA (not included).

AC OPERATION

Connect the AC adapter to your 120V AC outlet. Then connect the small plug to the "4.5V DC 500mA" jack on the side of the player as shown in the following illustration. If the AC adapter will not be used for an extended period of time, remove it from the wall outlet by pulling on the adapter housing. Do not remove the adapter by pulling on the cord. Do not touch the AC adapter with wet hands.

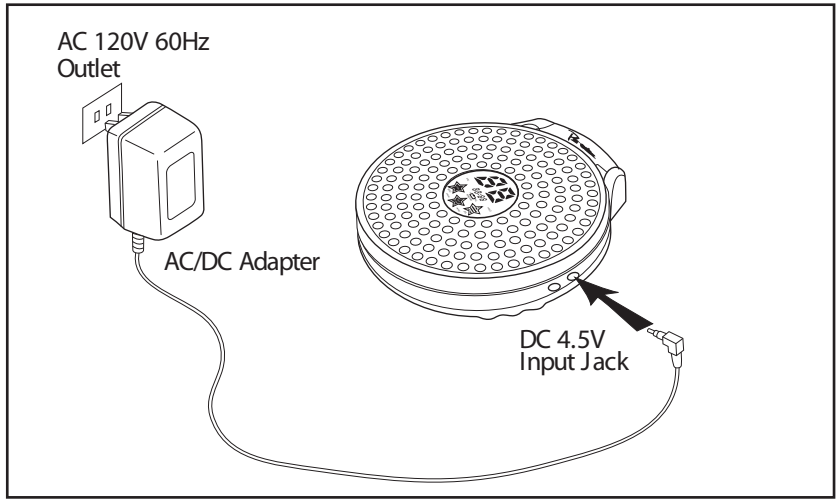

OPERATING INSTRUCTIONS

PLAYING A COMPACT DISC

1. Slide the CD door **OPEN** switch to the right to release the lock and open the CD Door.
2. Place your disc on the center spindle with the printed label side facing up. Press down gently near the center hole to make sure the disc is properly seated on the spindle.
3. Close the door completely until it locks.
4. Turn the **VOLUME** control to a low level (▼ button) before you begin playback. (Only under power On.)
5. Press the **PLAY/PAUSE** ▶ II button. "- -" flashes in the display as the player reads the disc. The total tracks and playing time will appear momentarily and then playback begins on Track 1. The Anti-Skip indicator (ESP) and the playing time shows on the LCD display.
6. Adjust the **VOLUME** and **BASS BOOST** controls as desired.
7. When all tracks have been played, the player stops and the display again shows the total tracks and playing time on the disc. After approximately 30 seconds the power shuts off and the display goes blank.
8. To stop playback before the disc ends press the STOP ■ button at any time. Press the **STOP** ■ button again to shut the power off immediately. Slide the CD Door OPEN switch to the right to open the door and remove your disc. Close the CD Door and return your disc to its protective storage case.

PAUSE CONTROL

Press the **PLAY/PAUSE** ▶ II Button during playback to pause momentarily. The sound stops, the time display flashes but the disc continues to spin.
Press the **PLAY/PAUSE** ▶ II button again to cancel pause and resume playback. The sound returns and the display stops flashing.

SKIP/SEARCH CONTROLS

To skip forward or backward to another track during playback press the **SKIP Forward** ▶▶ or **SKIP Reverse** ◀◀ buttons repeatedly until the desired track number appears in the display. Playback will begin on the desired track.

To search forward or backward within a track to locate a specific musical passage press and hold either the **SKIP Forward** ▶▶ or **SKIP Reverse** ◀◀ buttons. The compact disc compact player moves forward or backward at high speed. When you reach the desired point in the track, release the buttons and normal playback resumes.